

OMRON

Model **ZW-S70**

Sensor Head for Fiber Coaxial Displacement Sensor

INSTRUCTION SHEET

Thank you for selecting OMRON product. This sheet primarily describes precautions required in installing and operating the product. Before operating the product, read the sheet thoroughly to acquire sufficient knowledge of the product. For your convenience, keep the sheet at your disposal.

TRACEABILITY INFORMATION:

Importer in EU:
Omron Europe B.V.
Wegalaan 67-69,
NL-2132 JD Hoofddorp
The Netherlands

Manufacturer:
OMRON Corporation,
Shiokoji Horikawa, Shimogyo-ku,
Kyoto. 600-8530 JAPAN

The following notice applies only to products that carry the CE mark:
Notice:
This is a class A product. In residential areas it may cause radio interference, in which case the user may be required to take adequate measures to reduce interference.

9531901-1B

© OMRON Corporation 2016 All Rights Reserved.




PRECAUTIONS ON SAFETY

●Meanings of Signal Words

	WARNING	Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally, there may be significant property damage.
--	----------------	---

	CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or in property damage.
--	----------------	--

●Alert Statements in This Sheet

 WARNING		
This product is not designed or rated for ensuring safety of persons either directly or indirectly. Do not use it for such purposes.		
Looking into the LED light continuously may cause visual impairment. Do not look directly into the LED light.		

PRECAUTIONS FOR SAFE USE

Please observe the following precautions for safe use of the products.

- 1.Installation Environment
 - Do not use the product in environments where it can be exposed to inflammable/explosive gas.
 - To secure the safety of operation and maintenance, do not install the product close to high-voltage devices and power devices.
- 2.Power Supply and Wiring
 - For details on power supply and wiring, refer to PRECAUTIONS FOR SAFE USE on the Instruction Sheet of the dedicated Controller (ZW-7000□).
 - Tighten the mounting screw to the torque specified in this instruction sheet.
 - Always turn off the power of the main unit before taking the following actions. Not doing so may result in malfunction.
 - Connecting or wiring the cable
 - Mounting or removing the connector
 - Mounting or removing the Calibration ROM
 - Handling the fiber cable
 - Using the product without observing the following might damage the fiber cable.
 - Use the fiber cable with the bending radius of at least 20 mm.
 - Avoid stress being applied to the root of the fiber connector due to bending.
 - Do not forcibly pull the fiber cable.
 - Do not step on or put a heavy object on the fiber cable.
 - Avoid applying torsional stress on the fiber cable.
- 3.Others
 - Do not look into the light injection port directly.
 - Do not use in safety circuits for atomic energy or that are critical for human life.
 - Do not attempt to disassemble, deform by pressure, incinerate, repair, or modify this product.
 - When disposing of the product, treat as industrial waste.
 - Connect the dedicated devices (sensor head, calibration ROM, fiber cable, and RS-232C cable). Use of other devices may result in fire, explosion, malfunction or failure.
 - Do not cut the fiber cable. An injury may result due to the cutting area of the glass. In addition, the Sensor may fail to work properly if the cable is cut. • If you notice an abnormal condition such as a strange odor, extreme heating of the unit, or smoke, immediately stop using the product, turn off the power, and consult your dealer.
 - Do not drop or impose shock on the product.
 - Ensure that all components which have locking mechanisms are locked before using the product.
- 4.Regulations and standards
 - EN61326-1
 - Electromagnetic environment : Industrial electromagnetic environment (EN/IEC 61326-1 Table 2)
 - The following condition is applied to the immunity test of this product:
While receiving electromagnetic interference, the voltage/current output might vary within ±3% of full scale.
 - EMC Directive : No.2014/30/EU

PRECAUTIONS FOR CORRECT USE

Observe the following to prevent failure, malfunctioning, and adverse effects on performance and the device.

- 1.Installation site
 - Do not install in the following locations:
 - Locations where the ambient temperature exceeds the rated temperature range.
 - Locations subject to sudden temperature changes (where condensation will form).
 - Locations where the relative humidity is below or above 35 to 85% RH.
 - Locations where there are corrosive or flammable gases.
 - Locations where there is dust, salt, or iron powder.
 - Locations where the device will be subject to direct vibration or shock.
 - Locations where there is strong scattered light (laser light, arc welding light, ultraviolet light, etc.)
 - Locations exposed to direct sunlight or next to a heater.
 - Locations where there is splashing or spraying of water, oil, or chemicals.
 - Locations where there is a strong electrical or magnetic field.
- 2.Power and cable connections
 - When using a commercially available switching regulator, make sure that the Frame ground terminal is grounded.
 - If there are surges on your power line, connect a surge absorber as appropriate for your conditions of use.
 - Use the product with the specified voltage. Applying a voltage or AC voltage that exceed the rating may result in burning or explosion of circuit components.
 - The fiber joint of the sensor head cannot be removed. If it was removed by accident, please contact OMRON's local office or sales office.
 - To extend the fiber cable between the Sensor Head and Controller, an optional extension fiber cable (ZW-XF70□□R) must be used. Only one extension fiber cable can be connected.
 - Use the Sensor Head and Calibration ROM of the same serial number. Operation will fail if those with different serial numbers are used.
 - When the fiber cable is not connected, be sure to attach the provided protective caps to the connectors of fiber cable. Leaving the product without the protective caps may result in malfunction caused by adhesion of a foreign material.
- 3.Warming Up
 - After turning on the power supply, allow the Controller to stand for at least 30 minutes before use. The circuits are unstable immediately after the power supply is turned on and attempting measurement may result in inconsistent measurement values.
- 4.Maintenance
 - Do not use thinner, benzene, acetone or kerosene to clean the Sensor Head, fiber cable or sensor controller. If considerable foreign matter or dust collects on the Sensor Head, or receiver/emitter of the sensor controller, use a blower brush (for camera lenses) to blow off the foreign matter. Avoid blowing it off with your breath. For a small amount of foreign matter or dust, gently wipe with a soft cloth. Do not wipe hard. If the receiver/emitter is damaged, malfunction or measurement error may result.
 - Do not touch the end face of the fiber cable of the sensor head. Otherwise, performance deterioration might occur. If the end face touches anything or becomes unclean, wipe off the dirt with option product ZW-XCL, the commercially available dedicated fiber cleaner, or a dry soft cloth. Do not use cloth soaked in alcohol. Otherwise, dirt might adhere again.
 - To clean the fiber connector of the controller, use option product ZW-XCL or the commercially available dedicated fiber cleaner.
 - If inserting/extracting the sensor head frequently, use of the repeatedly usable commercially available dedicated fiber cleaner is recommended.

Product name	Model No.	Manufacturer
NEOCLEAN-M	ATC-NE-M1	NTT Advanced Technology Corporation

Contact


(Request for an Estimate)
URL http://www.ntt-at.com/product/optical_cleaner/Distributors.html

(Request for Information)
Company NTT Advanced Technology Corporation
Address Muza Kawasaki Central Tower, 1310
Omiya-cho Saiwai-ku, Kawasaki-shi,
Kanagawa, 212-0014, Japan
TEL +81 44 589 5894
URL http://www.ntt-at.com/product/optical_cleaner/

- If the fiber cable is plugged in/out or extended, perform calibration of the Sensor Head. For details on Sensor Head calibration, refer to the User's Manual.
- 5.Sensing Object For Sensor Head
 - Depending on the material/shape of the object, the object cannot be measured or can be measured but accuracy is poor: Transparent objects, objects with a low reflective sensor ratio, objects smaller than the spot diameter, objects with a large curvature, excessively inclined objects, objects with thin film on the surface, etc.
 - 6.Effects of surrounding lightings
 - Avoid installing the product at a location where the emitter/receiver of the Sensor Head is exposed to strong lighting. If the object has a reflective surface, malfunction of the product may occur due to light reflection. Prevent it by covering the lighting.
 7. Influence of air current
 - Measured values may vary due to slow air current around the Sensor Head. In such case, put a cover around the Sensor Head.
 - 8.Operation beyond the measurement range
 - As this sensor is sensitive, malfunction may occur beyond the measurement range (near side). In such case, shortening the exposure time may solve the problem.

■Part Names and Functions


●Sensor Head

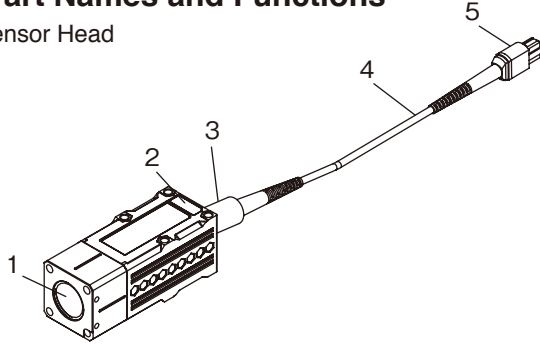

No.	Name	Function
1	Emitter/receiver	Emits/receives light.
2	Serial No.	A serial number. Only the combination of the Sensor Head and Calibration ROM with the same serial number is valid.
3	Fiber joint	A joint of the Sensor Head and fiber cable. (Do not remove. Otherwise, repair will be needed.)
4	Fiber cable	A fiber that exchanges optical signals with the Controller.
5	Fiber connector	A connector that connects the Controller and fiber cable.

●Calibration ROM

The dedicated ROM for the Sensor Head. It is included in the Sensor Head.
Use it by connecting to the Controller.

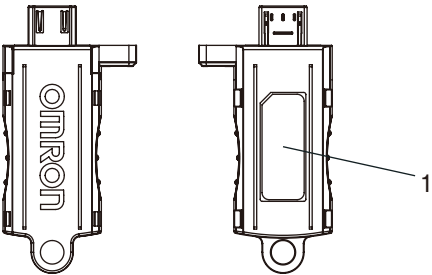


No.	Name	Function
1	Serial No.	A serial number. Only the combination of the Calibration ROM and Sensor Head with the same serial number is valid.

■Specifications


Item	Specifications		
	ZW-S7010	ZW-S7020	ZW-S7030
Applicable sensor controller	ZW-7000□		
Measuring center distance	10 mm	20 mm	30 mm
Measuring range *1	±0.5 mm	±1 mm	±2 mm
Static resolution *2	0.004 μm	0.008 μm	0.016 μm
Linearity *3	±0.45 μm	±0.9 μm	±2.0 μm
Spot diameter *4 (all areas in the measurement range)	50 μm dia.	70 μm dia.	100 μm dia.
Measurement cycle *5	20 μs to 400 μs		
Operating ambient illumination	Object surface illumination: 30000 Lx max. (incandescent light)		
Ambient temperature range	Operating: 0 to 50°C, Storage: -15 to +60°C (with no icing or condensation)		
Ambient humidity range	Operating and storage: 35% to 85%RH (with no condensation)		
Degree of protection	IP40 (IEC60529)		
Vibration resistance (destructive)	10 to 150 Hz, 0.35-mm half amplitude 80 min each in X, Y, and Z directions		
Shock resistance (destructive)	150m/s ² 3 times each in six directions (up/down, left/right, forward/backward)		
Temperature characteristic *6	0.6 μm/°C	1.1 μm/°C	1.8 μm/°C
Safety of LED	Risk Group 3 (IEC 62471)		
Material	Body: Aluminum die-cast Fiber cable coating: PVC Calibration ROM: PC		
Fiber cable length	0.3 m、2 m (Flex resistance cable)		
Fiber cable minimum bending radius	20 mm		
Insulation resistance (Calibration ROM)	Between case and all terminals: 20 MΩ (250 VDC)		
Dielectric strength (Calibration ROM)	Between case and all terminals: 1000 VAC, 50/60 Hz, 1 min.		
Weight	Fiber cable length 0.3m : Approx. 170 g Fiber cable length 2m : Approx. 180 g		
Accessories	Calibration ROM fixing screw (M2), Fiber protection cap, Strap (2 pieces), Instruction Sheet (This Instruction Sheet), Precautions		

- *1 The measurement range is applicable if the measurement frequency is 28 us or more.
- *2 An actual figure when measured an OMRON-standard mirror surface object with average count of 16384 times at the measuring center distance.
When connecting the Export Trade Control Order compatible Controller (ZW-7000T), the minimum resolution is 0.25 μm regardless of the sensor head or setup conditio
- *3 Set OMRON standard mirror-surface object as the material: Error to the ideal straight line measured using a mirror surface
- *4 Actual figure defined at 1/e2 (13.5%) of the peak light intensity of the measured wavelengt
- *5 If an extension fiber cable 5 m long or more is connected, the setup range of measurement cycle (exposure time) must be changed. For details, refer to "Setting Measurement Cycle" in the user's manual.
- *6 Actual value of the variation of the measured value at the measurement center distance when both the sensor head and object are fixed to an aluminum jig and the sensor head and the controller are put in the environment of the same temperature

■Attach the strap to the calibration ROM

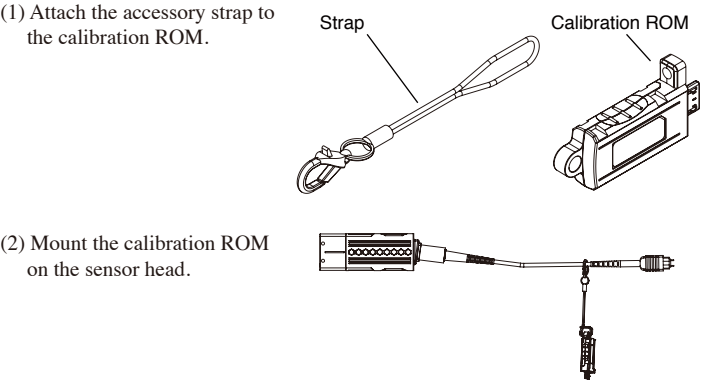


■Attaching the strap to the protection cap

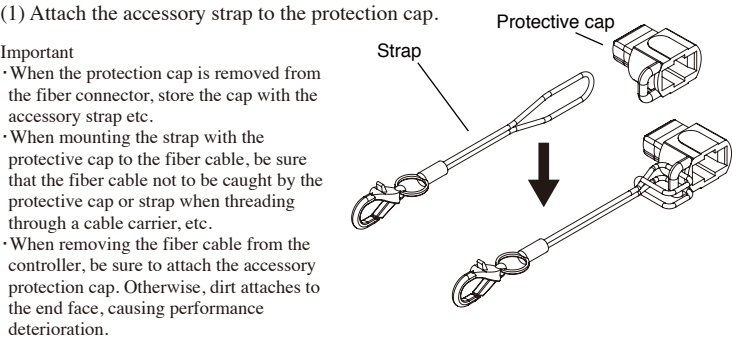


■Connecting the fiber cable with the calibration ROM

Connect the fiber cable of the Sensor Head to the fiber connector of the Controller.

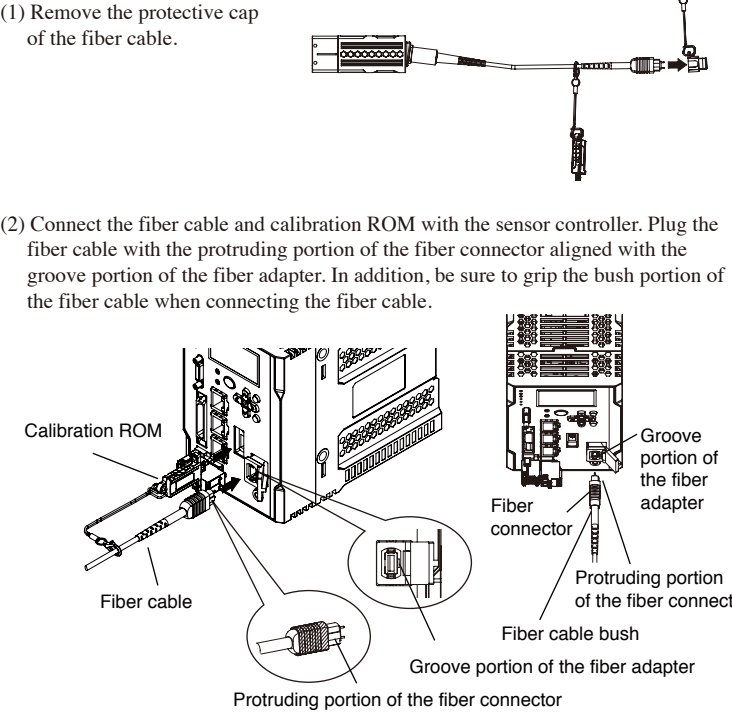


Grip the bush portion of the fiber cable (black) on the right-hand figure, align the groove portion of the fiber adapter with the protruding portion of the fiber connector, and insert the cable until it clicks.

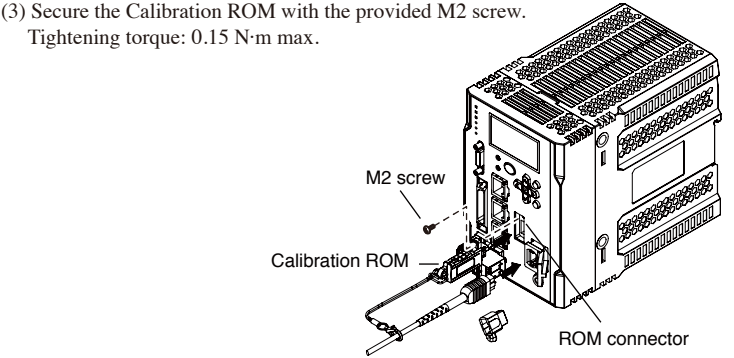

Important

- Before pushing in or pulling out the calibration ROM, be sure to turn off the power of the controller. Otherwise, a failure might be caused
- Use the controller as connecting with the calibration ROM at any time. Otherwise, an error is displayed on the main digital as "SYSERR" and the sub-digital "NO.ROM", so that measurement is not possible.
- Be sure to use the sensor head and calibration ROM in combination of the same serial number
- Otherwise, the controller does not operate correctly


■Removal of the fiber cable

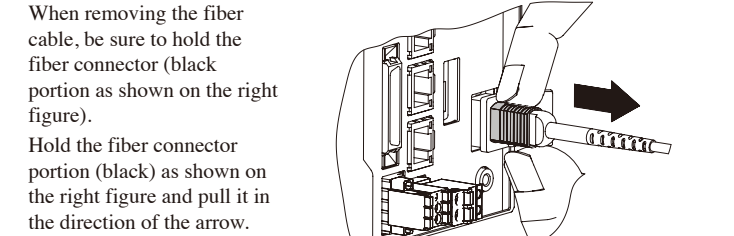


Important

- If removing the fiber cable as gripping the bush portion, the portion will be disengaged. Be sure to grip the fiber connector.

■The cleaning method of ZW-XCL

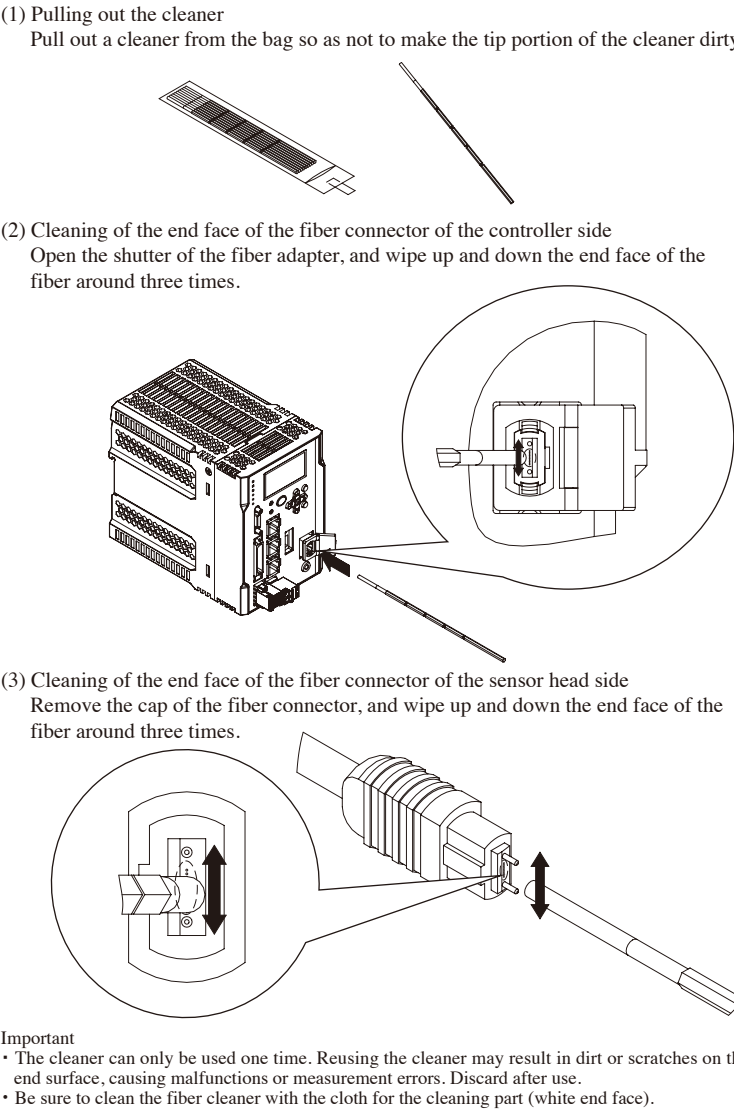

■Dimensions

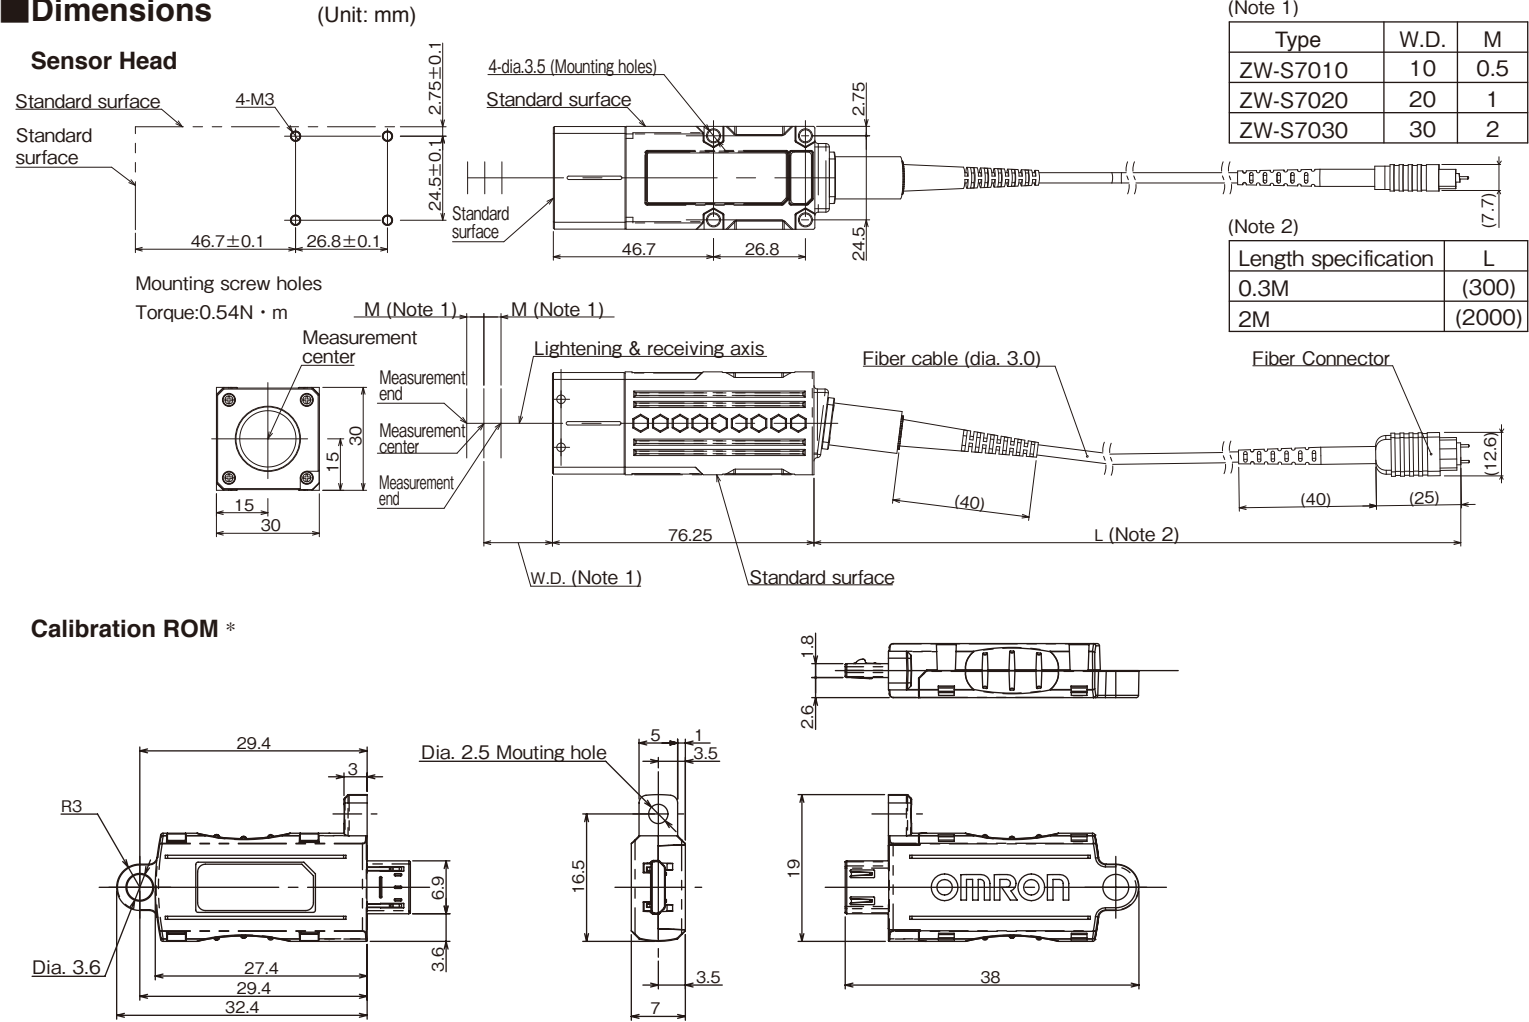

* Included in the Sensor Head (ZW-S7010/S7020/S7030). Be sure to use the Sensor Head and Calibration ROM of the same serial numbers.

■Relevant Manuals

Man. No.	Model	Manual name
Z362	ZW-7000□/5000□	Confocal Fiber Displacement Sensor ZW-7000/5000 Series User's Manual
Z363	ZW-7000□/5000□	Confocal Fiber Displacement Sensor ZW-7000/5000 Series User's Manual: Communication Settings
W504	SYSMAC-SE2□□□	Sysmac Studio Version 1 Operation Manual

Suitability for Use

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM. See also Product catalog for Warranty and Limitation of Liability.

OMRON Corporation Industrial Automation Company
Tokyo, JAPAN Contact: www.ia.omron.com

Regional Headquarters

■ **OMRON EUROPE B.V.**
Sensor Business Unit
Carl-Benz-Str. 4, D-71154 Nufringen, Germany
Tel: (49) 7032-811-0/Fax: (49) 7032-811-199

■ **OMRON ELECTRONICS LLC**
2895 Greenspoint Parkway, Suite 200
Hoffman Estates, IL 60169 U.S.A.
Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

■ **OMRON ASIA PACIFIC PTE. LTD.**
No. 438A Alexandra Road # 05-05/08 (Lobby 2),
Alexandra Technopark,
Singapore 119967
Tel: (65) 6835-3011/Fax: (65) 6835-2711

■ **OMRON (CHINA) CO., LTD.**
Room 2211, Bank of China Tower,
200 Yin Cheng Zhong Road,
PuDong New Area, Shanghai, 200120, China
Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200